


# BUILDING A WEATHERVANE

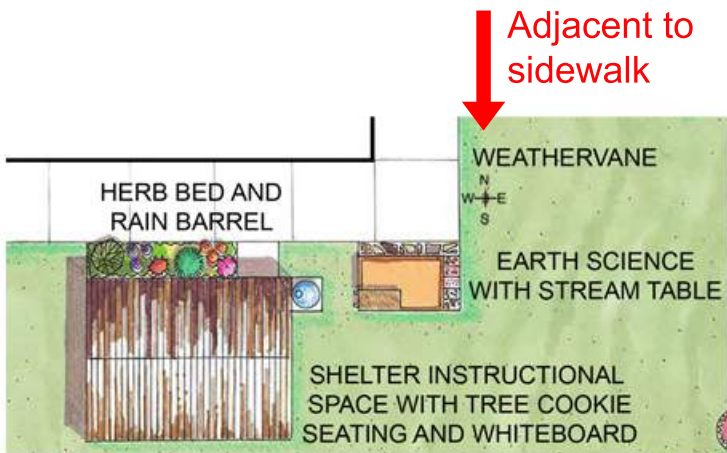

## MATERIALS

- \* 4x4x8 Cedar Post
- \* Weathervane
- \* Drill
- \* 2 Bags of Concrete
- \* Wood Screws and Screwdriver
- \* Pencil
- \* Level

## DIRECTIONS

1. See plan for location.
2. Dig 2' deep hole
3. Mark holes using mounting plate and then drill pilot holes in top of cedar post
4. Fasten mounting plate to top of cedar post with screws, then attach weathervane pole to mounting plate
5. Place directional onto the pole
6. Place windcups onto pin bearing side down
7. Place the top onto pin
8. Mix 2 bags of concrete in wheelbarrow
9. Place cedar post in hole and pour cement in hole around cedar post. Keep concrete 2" below finished grade.
10. Level post
11. Using phone compass point arrow to North