

CEDAR FRAMED WELCOME SIGN AT ENTRY



Figure one

MATERIALS

- * Welcome Sign
- * 4X4 7' Cedar Post
- * (4) 2x6 Pre Cut Cedar Boards
- * (2) Pre Cut 2x4 Cedar Braces
- * (2) Pre Cut 2x2 Cedar Braces
- * (2) Bags Concrete
- * 2" Lag Bolts and Washers
- * 3" Wood Screws
- * Drill
- * Post Hole Digger
- * Shovel
- * Wheelbarrow
- * Level

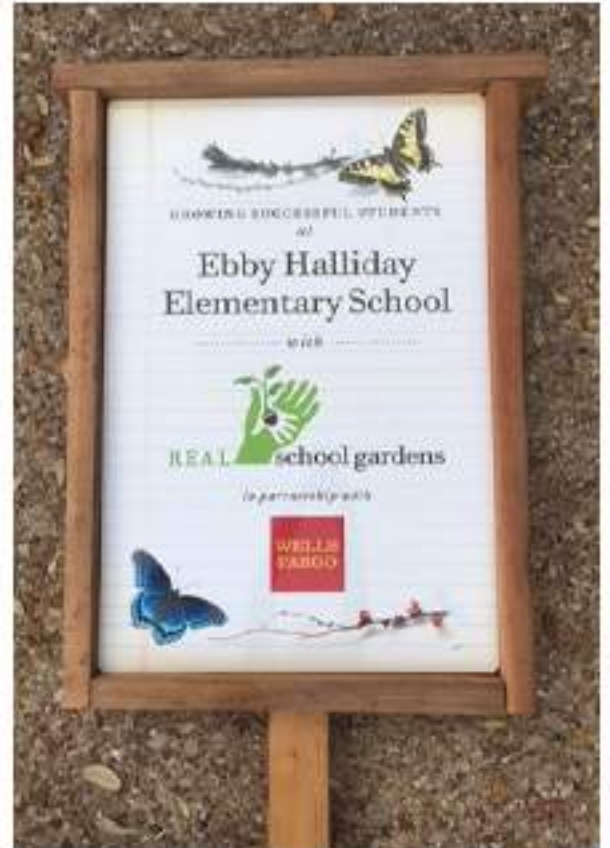


Figure two

DIRECTIONS

1. Set sign on post, flush with the top of the post.
2. Place notched 2x6 on post. See figure one.
3. Place boards on sides and top. Top board has equal overhang on each side. See Figure two.
4. Attach sign to post at top and bottom using washers and 2" lag bolts.
5. Using wood screws assemble frame. Attaching in two places per joint. Drill pilot holes if necessary.
6. Brace bottom notched 2x6 on each side of the post with 2x4 wood pieces.
7. Turn sign over and place 2x2 braces at edge of sign adjacent to 2x6. Attach 2x2 braces to 2x6 frame.
8. Dig one hole 24" deep, see stake for location
9. Place the 4x4 post in the hole and pour mixed concrete around the post. Level.