


WIND SOCK

LOCATION: Centered between beds

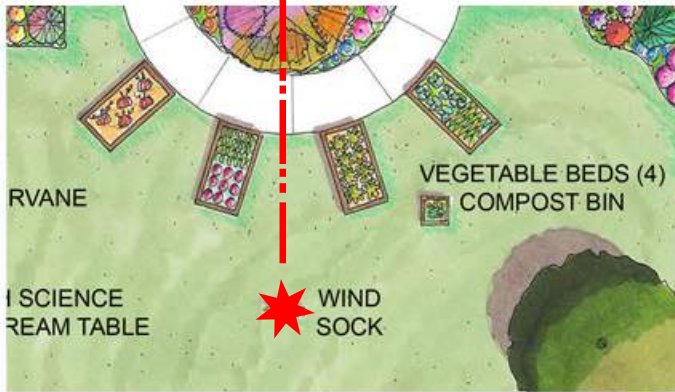

MATERIALS

- * 4 X 8 Cedar Post
- * Wind Sock
- * Shovel
- * Level
- * Wheelbarrow
- * Hitch Ring
- * 2 Bags of Concrete

DIRECTIONS

1. Screw in hitch ring in top of cedar post - centered
2. Dig 2' hole
3. Mix 2 bags of concrete in wheelbarrow
4. Pour concrete around post and level
5. Attach wind sock to hitch pin

